

Maintenance Settings manuell setzen

Sollten Sie ein Grandstream Telefon nicht über Telematica bezogen haben, dieses jedoch trotzdem über unsere Telefonanlage provisionieren, dann müssen Sie das Telefon manuell für den Abruf des Configfiles konfigurieren.

Dies ist nur bei erster Inbetriebnahme sowie nach einem Firmware Reset notwendig.

Das "XML Kennwort" sowie das "HTTP/HTTPS Password" erhalten Sie von unserem Support-Team.

Grandstream GXP2130

Admin Logout | Reboot | Provision | Factory Reset | English

Grandstream
CONNECTING THE WORLD

STATUS ACCOUNTS SETTINGS NETWORK MAINTENANCE PHONEBOOK

Version 1.0.7.25

Maintenance

Upgrade and Provisioning

Firmware Upgrade and Provisioning

☒ Always Check for New Firmware
☐ Check New Firmware Only When F/W pre/suffix Changes
☐ Always Skip the Firmware Check

XML Config File Password

HTTP/HTTPS User Name

HTTP/HTTPS Password

Always Authenticate Before Challenge

☒ No ☐ Yes

Upgrade via

☐ TFTP ☒ HTTP ☐ HTTPS

Firmware Server Path

Config Server Path

Firmware File Prefix

Firmware File Postfix

Config File Prefix

Config File Postfix

Allow DHCP Option 43 and Option 66 to Override Server

☒ No ☐ Yes

Additional Override DHCP Option

None

Allow DHCP Option 120 to Override SIP Server

☒ No ☐ Yes

3CX Auto Provision

☐ No ☒ Yes

Automatic Upgrade

☐ Yes, check for upgrade every 1440 minute(s)
☒ Yes, check for upgrade every day
☐ Yes, check for upgrade every week

Hour of the Day (0-23)

3

Day of the Week (0-6)

1

Disable SIP NOTIFY Authentication

☒ No ☐ Yes

Authenticate Cert File

☒ No ☐ Yes

Download Device Configuration

Download

Upload Device Configuration

Upload

Save Save and Apply Reset

Copyright © Grandstream Networks, Inc. 2016. All Rights Reserved

Ab Firmware 1.0.9.x wurde die Oberfläche geringfügig überarbeitet und besser strukturiert. Die zu setzenden Werte sind aber identisch. Bitte entnehmen Sie die Werte der obigen Abbildung.

Grandstream GXP2130

Admin Logout | Reboot | Provision | Factory Reset | English

Grandstream
CONNECTING THE WORLD

STATUS ACCOUNTS SETTINGS NETWORK MAINTENANCE PHONEBOOK

Version 1.0.9.25

Maintenance

Upgrade and Provisioning

Upgrade Firmware

☒ Always Check for New Firmware
☐ Check New Firmware Only When F/W pre/suffix Changes
☐ Always Skip the Firmware Check

Always Authenticate Before Challenge

☒ No ☐ Yes

Allow DHCP Option 43 and Option 66 to Override Server

☒ No ☐ Yes

Additional Override DHCP Option

None

Allow DHCP Option 120 to Override SIP Server

☒ No ☐ Yes

3CX Auto Provision

☐ No ☒ Yes

Automatic Upgrade

☐ Yes, check for upgrade every 1440 minute(s)
☒ Yes, check for upgrade every day
☐ Yes, check for upgrade every week

Hour of the Day (0-23)

3

Day of the Week (0-6)

1

Disable SIP NOTIFY Authentication

☒ No ☐ Yes

Config

Config Upgrade via ☐ TFTP ☒ HTTP ☐ HTTPS

Config Server Path

Config HTTP/HTTPS User Name

Config HTTP/HTTPS Password

Config File Prefix

Config File Postfix

XML Config File Password

Authenticate Conf File ☒ No ☐ Yes

Download Device Configuration [Download](#)

User Protection ☒ Off ☐ On

Download User Configuration [Download](#)

Upload Device Configuration [Upload](#)

Export Backup Package [Download](#)

Restore from Backup Package [Upload](#)

Firmware

Firmware Upgrade via ☐ TFTP ☒ HTTP ☐ HTTPS

Firmware Server Path

Firmware HTTP/HTTPS User Name

Firmware HTTP/HTTPS Password

Firmware File Prefix

Firmware File Postfix

[Save](#) [Save and Apply](#) [Reset](#)