

# Grandstream HT812 Factory Reset

1. Unplug the Ethernet cable.
2. Locate the reset hole on the back panel of your HT812.
3. Insert a pin in this hole, and press for about 7 seconds until all front LEDs start blinking.
4. Take out the pin. All unit settings are restored to factory settings.