



# Maintenance Settings manuell setzen

Sollten Sie ein Grandstream Telefon nicht über Telematica bezogen haben, dieses jedoch trotzdem über unsere Telefonanlage provisionieren, dann müssen Sie das Telefon manuell für den Abruf des Configfiles konfigurieren. Dies ist nur bei erster Inbetriebnahme sowie nach einem Firmware Reset notwendig.

Das "XML Kennwort" sowie das "HTTP/HTTPS Password" erhalten Sie von unserem Support-Team.

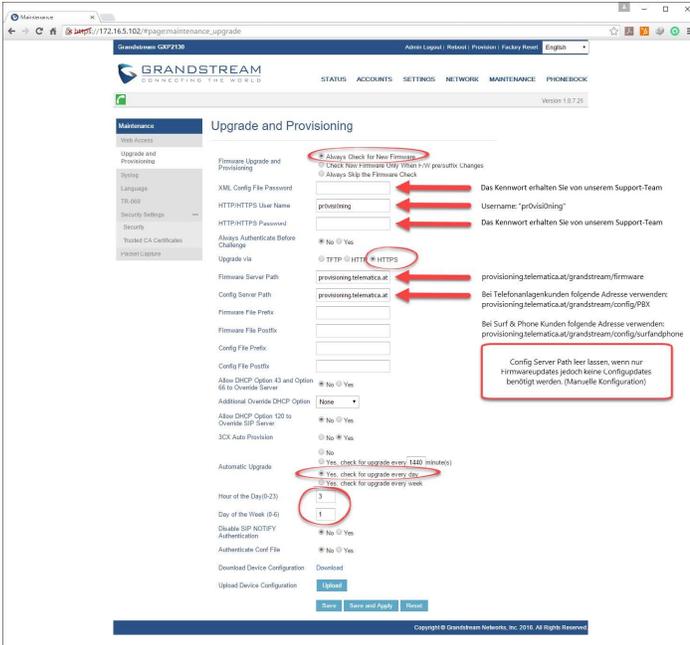

Ab Firmware 1.0.9.x wurde die Oberfläche geringfügig überarbeitet und besser strukturiert. Die zu setzenden Werte sind aber identisch. Bitte entnehmen Sie die Werte der obigen Abbildung.

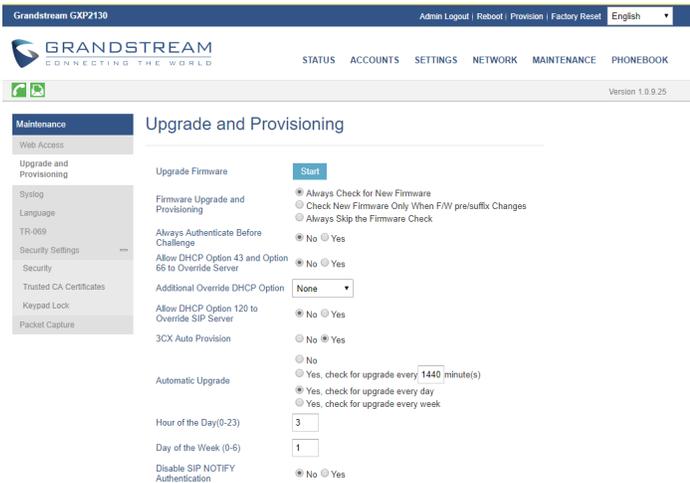

## Config

Config Upgrade via  TFTP  HTTP  HTTPS

Config Server Path

Config HTTP/HTTPS User Name

Config HTTP/HTTPS Password

Config File Prefix

Config File Postfix

XML Config File Password

Authenticate Conf File  No  Yes

Download Device Configuration [Download](#)

User Protection  Off  On

Download User Configuration [Download](#)

Upload Device Configuration [Upload](#)

Export Backup Package [Download](#)

Restore from Backup Package [Upload](#)

## Firmware

Firmware Upgrade via  TFTP  HTTP  HTTPS

Firmware Server Path

Firmware HTTP/HTTPS User Name

Firmware HTTP/HTTPS Password

Firmware File Prefix

Firmware File Postfix

[Save](#) [Save and Apply](#) [Reset](#)